

Wellcraft Model 5600

Custom Dome Window Well Cover Installation Instructions


Step 1

Set dome over well. If dome is wider than the well at the wall... mount aluminum brackets on outside of well lip. If dome is narrower... mount brackets inside of lip edge



Step 2

Drill and bolt aluminum brackets flush with top of well lip. Placement of 1 ½" bracket 7" from the wall and placement of 1" bracket 27" from the wall. Use the 8-32 bolts and nuts – 2 per bracket with the single hole side of bracket pointing up.

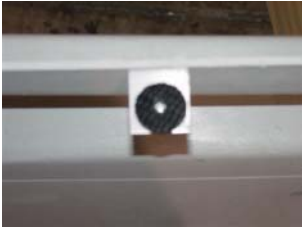

Step 3

Bolt the black plastic "Dual Lock™" round washers to top of each bracket using the 6-32 bolts and washers.



Step 4

Set cover (centered) on top of the window well. Mark a dot on plastic, at the center of Dual Lock™ washer at each of the 4 locations.



Step 5

Now take the square adhesive "Dual Lock™" pad... peel off for sticky surface and center under dot to adhere to underside of flange of cover. 4 – locations. Cover must be room temp or adhesive won't work.

Step 6

Place dome over Window well and apply pressure on each Dual Lock™ area to snap cover in place. Tug or push up on cover for snap off removal.

CLEANING: Window Well Covers may be cleaned with a mild solution of window cleaner and a soft cloth. Use of harsh chemicals and scouring powders should be avoided.

For paint splatters, DO NOT USE PAINT THINNERS OR SOLVENTS! ONLY ALCOHOL FOR CLEANUP.