

ASSEMBLY INSTRUCTIONS

10 x 10 Canvas Weave


This kit contains five strips of canvas that is designed to fit the 10 x 10 Flat Top Pergolas. Models include the Venetian, Luxor, and Tuscany Pergolas. No hardware is required to attach the canvas to the shade slats of the pergola as hook and loop fastener strips are already sown in at the ends of the canvases.

Check the box and make sure you have five strips and that the male-female hook and loop fastener orientation is correct. In the event of missing or defective parts, please call our customer service department at **1 800 282 9346 extension #20** (Monday to Friday, 8:00 AM to 4:00 PM EST).

STEPS


Layout all five strips of canvas and check the ends to make sure there are a female and male hook and loop fastener strip on both ends as shown.

Male and Female Hook and Loop Fastener Strips

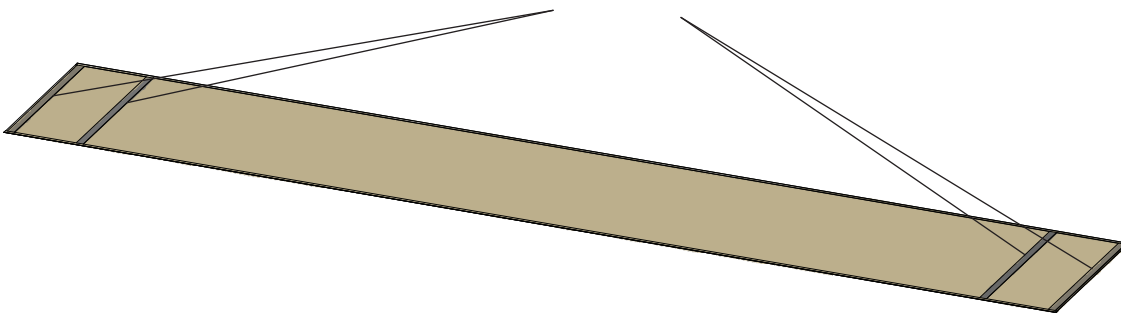

With the hook and loop fastener strips facing up, weave the canvas through the shade slats as shown. Note the pattern of the weave (below two shade slats, and above two shade slats). Starting with below one shade slat, and ending with the same.

The ends of the canvases would then wrap around the end shade slats and be secured with the hook and loop fastener.

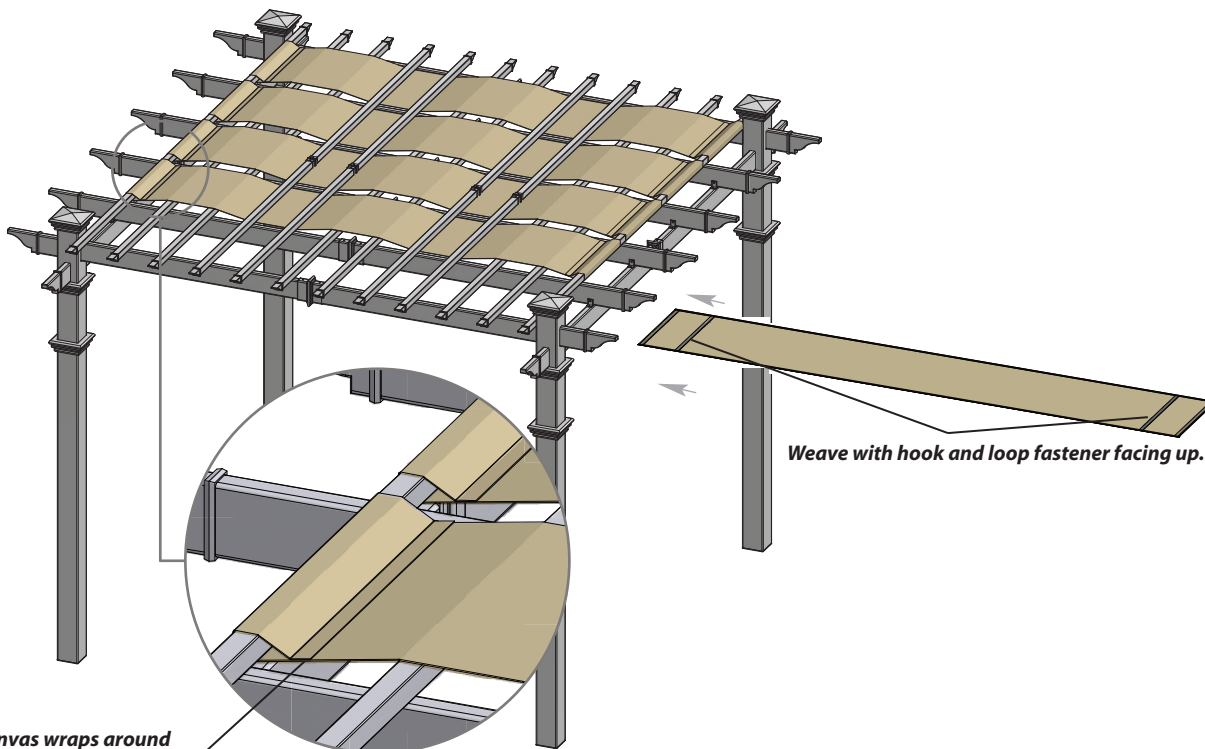

Weave with hook and loop fastener facing up.

End of canvas wraps around the end shade slat as shown.

Note: Canvas strips should be removed under heavy wind or snow to prevent any ripping or damage.