

Installation instructions:

AMERICRAFT PANEL MOULDING

+ CORNERS, PLINTH BLOCKS, AND ROSETTES

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- Loctite Power Grab
- Adhesive
- Brad Nails
- Miter Saw
- Stain or paint
- Pencil

IMPORTANT INFO

- Panel moulding is a widely used architectural element, and installation practices, techniques, and methods may vary. Installation instructions are intended to be general in nature and additional information may be resourced at customer's/installer's discretion.
- For paint grade moulding, caulking, putty, or other filler of choice may be used to hide imperfections. For stain grade mouldings, increase precision to avoid use of any fillers.
- Acclimate moulding in room 2 to 3 days prior to installation.
- Clean installation surface and back of moulding of all dirt and dust with a clean cloth or sponge. Ensure that the surface and the back of the moulding are completely dry prior to installation.
- Molding ends may be distorted and should be trimmed 1/8" prior to install if butting against another molding end.

INSTALL INSTRUCTIONS:

Panel Moulding Installation

1. Measure room to determine layout and lengths of moulding needed for each location.
2. Using a miter saw, cut moulding to desired length.
3. Apply a continuous 1/4" bead of Loctite Power Grab adhesive to the back of the moulding. Firmly place and press the moulding against the wall and ceiling. (Diagram A)
4. Use a brad nailer to secure the moulding to the wall and ceiling.
NOTE: Nail holes on stain grade moulding should not be caulked. Use of brad nails is at customer's/installer's discretion.
5. If using a plinth block, rosette, or panel moulding corner, apply a bead of Loctite Power Grab adhesive to the end of the moulding in contact with the plinth block, rosette, or panel moulding corner (Diagram B)

Panel Moulding Corners, Plinth Block, or Rosette Installation

1. Apply a bead of Loctite Power Grab construction adhesive to the back of the panel moulding corner, plinth block, rosette
2. Place the panel moulding corner, plinth block, rosette on the desired install location and firmly press into place. For panel moulding corners, mark the desired install location on the wall first. (Diagram C)
3. Use a brad nailer to secure the panel moulding corner, plinth block, rosette to the wall or ceiling.
NOTE: Nail holes on stain grade moulding should not be caulked. Use of brad nails is at customer discretion.

EXAMPLE DIAGRAM:

DIAGRAM A

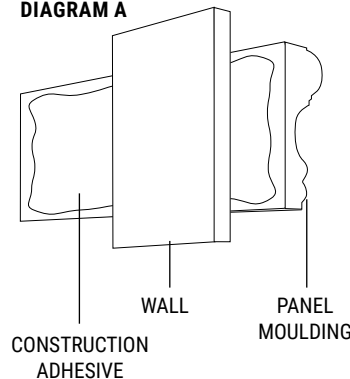


DIAGRAM B


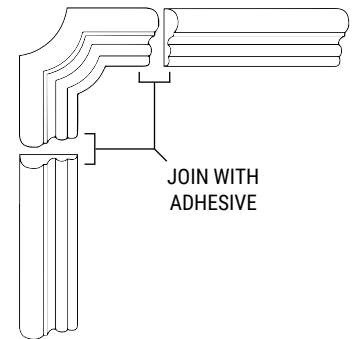


DIAGRAM C

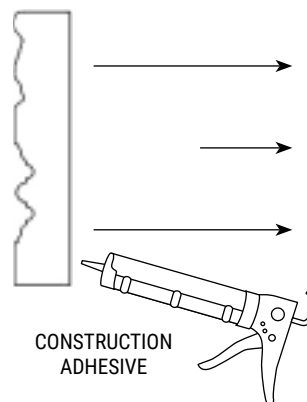

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

www.ekenamillwork.com