



# Weathered Quartz

## Glue-Up Tiles

## 12" x 24"

### Tools and supplies needed

- Protective eyewear or safety goggles
- Measuring tape
- Straightedge or Speed Square®
- Pencil
- Table saw, jig saw or circular saw (for long, straight cuts)
- Tin snips (for notching or short cuts)
- File
- Level (2' to 4')
- Caulk gun and adhesive

### Recommended Adhesives

- Loctite® Power Grab Ultimate®


### Preparation:

Before starting, make sure all surfaces are clean, dry, flat, smooth and free from dust, grease, etc. Lightly sand any glossy surfaces to remove sheen.

Measure the first area to be covered by Aspect material. Lay out the entire project on a flat surface, before adhering to the substrate to be sure you have enough tiles and your design and layout is correct. Plan for cutouts, corners or edge treatments before applying tiles. Tile edge seams will be less visible if they are not aligned.

Clean the back side of each panel using isopropyl alcohol and a paper towel or cloth. Apply adhesive to the back of the first panel. The recommended adhesive is Loctite® Ultimate®. Read and follow adhesive manufacturer's directions. Apply panel adhesive according to following drawing, using approximately a 1/8" to 1/4" bead. The 10 oz. adhesive tube covers approximately 3 Aspect glue-up stone panels.


### Tube Adhesive Application

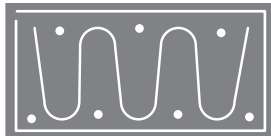


*Perimeter glue 1/2 inch in from edges around entire panel. Add glue dots in every open "U"*

Place the first tile into position and press against the wall—using hands or a "J" roller—firmly and evenly across the panel and squeeze out excess air. If edges or corners pop up, use a thumbtack in tile seam or painter's tape to hold down until adhesive sets. Wipe off excess adhesive. Follow adhesive manufacturer's directions. Do not allow any excess adhesive on tile face to dry as it will be very hard to clean up when dry and could damage the finish. Place second tile, and so on.

When starting a new row, use either a random staggered pattern or a subway pattern, either horizontally or vertically.

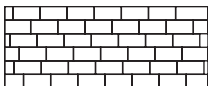

Staggered Pattern

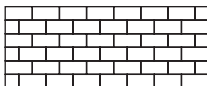

Subway Pattern

### Cutting Tiles

If cutting tiles is necessary, use one of our recommended tools and methods listed above. A table saw, jig saw or circular saw is recommended for longer straight cuts. A tin snips can be used for notching or short cuts. If desired, use a metal file or sandpaper to deburr the cut edges.

### Cleaning

Wash the tiles as needed using a mild liquid dish detergent mixed with warm water.

### Care after Installation

As with all natural stone products, there is some inherent risk of staining. Stone sealers or impregnators can provide protection against stains.

For additional information and options, please see [aspectideas.com/stone-backsplash-tiles/sealers-impregnators/](http://aspectideas.com/stone-backsplash-tiles/sealers-impregnators/)

### Weathered Quartz

Size: 12" x 24"

Model: # AGO-80



AGO-80

[aspectideas.com](http://aspectideas.com)

Customer Service: (800) 434-3750

ACP PO Box 1581, Appleton, WI 54912-1581

Made in India

(5.24.19)