


BUN FOOT INSTALLATION

OPTION 1: USING HANGER BOLT WITH T-NUTS OR MOUNTING PLATES

INSTALLING THE HANGER BOLT:

1. Pre-drill hole in the bun foot slightly smaller than hanger bolt.
2. Start threading into bun foot by hand.
3. Thread two nuts on the machine threaded end.
4. Use a wrench or socket to fully seat wood threads into bun foot.

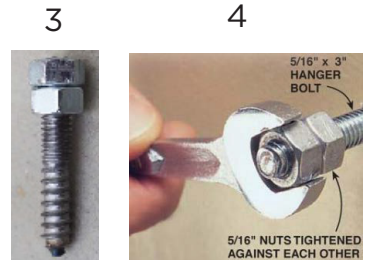

CHOOSING YOUR MOUNTING PREFERENCE:


T-NUT:

Drill hole to accommodate T-Nut. Then, pound it into hole with spikes toward the wood.



MOUNTING PLATE:

Screw plate into furniture.

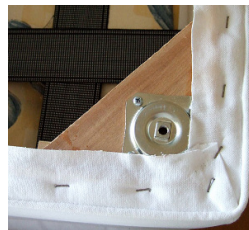

MOUNTING YOUR BUN FOOT:

T-Nut Mount



Mounting Plate Mount



OPTION 2: USING SCREWS

*Use a minimum of 3 screws, no smaller than #8 x 2" long.

1. Pre-drill the screw holes.
2. Drive screws through the cabinet into the bun foot.

