

installation instructions:

FORGECRAFT ADJUSTABLE BEAM STRAPS

SAFETY INSTRUCTIONS

- Use only the recommended tools for cutting and securing.
- Wear proper protective gear such as gloves and eye protection.
- Follow all safety instructions for adhesives, tools, and fasteners.
- Always measure twice, cut once, and follow best construction practices.

TOOL & MATERIAL CHECKLIST

- Tape Measure
- Straight Edge/Square
- Pen/Sharpie
- Handsaw/Wood cutting tool
- Construction Adhesive
- Black Marker (Touch ups)
- Sand Paper (Optional, for smoothing cut edges)

IMPORTANT INFO

- This is a rigid 3-piece product, not flexible. All parts must be trimmed to fit.
- The bottom piece is intentionally cut shorter to allow for overlap.
- Lightly sand cut edges for a cleaner finish if needed.

INSTALL INSTRUCTIONS:

1. Measure

Measure and mark the height of your beam for the two vertical components, and the exterior width of the beam for the horizontal component.

2. Trim

Cut the vertical components to match the height of the beam using a handsaw or wood-cutting tool.

Cut the horizontal component to the width of the beam, accounting for a 1" overlap on each side.

Note: The bottom piece should be 2 inches shorter than the actual beam width to ensure a proper fit.

3. Dry Fit

Dry fit the components together to make sure they fit around the beam and cover the seams.

4. Apply Adhesive

Apply a high-quality adhesive to the back of each piece, avoiding the edges.


Install the horizontal piece first, then attach the bottom strap, overlapping the tabs at the base of the sides for a seamless fit.

If covering a seam between two beams, position the straps evenly so the strap fully covers the seam on both sides.

5. Touch Up

Use a black permanent marker to conceal any visible fasteners.

EXAMPLE DIAGRAM:

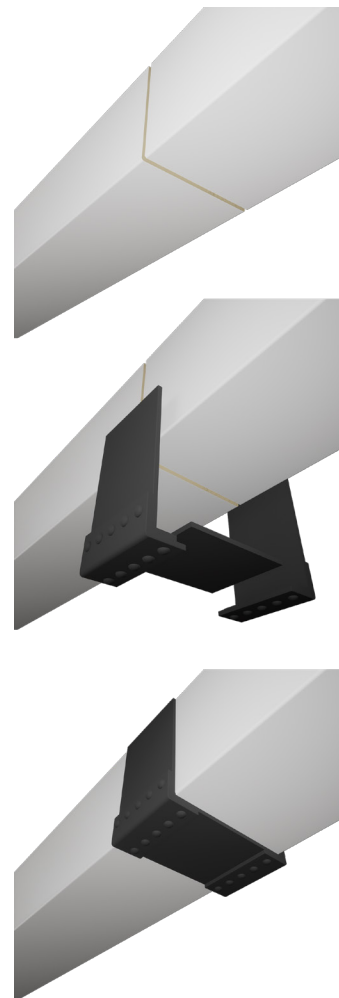

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

www.ekenamillwork.com