

installation instructions:

CASING/CHAIR/PANEL

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

Medallions are not load bearing. Do not use them to support electrical fixtures or ceiling fans.

TOOL & MATERIAL CHECKLIST

- ☐ construction adhesive
- ☐ caulk
- ☐ caulking gun
- ☐ finishing nails
- ☐ miter saw
- ☐ paint
- ☐ chalk line box & pencil


IMPORTANT INFO

- It is highly recommended that you paint or finish moulding with 100% acrylic latex paint before installing.
- Once installed, you can apply any necessary touchup paint or finish.
- Place moulding in room 2 to 3 days prior to installation. This allows the moulding to adjust to the temperature of the room.
- Clean installation surface and back of moulding of all dirt and dust with a clean cloth or sponge. Make sure that the surface and the back of the moulding are completely dry before attempting installation.

INSTALL INSTRUCTIONS:

1. Apply a continuous 1/2" bead of construction adhesive along the back of moulding lengths.
2. Press moulding against wall at the desired location. Use finishing nails to secure moulding into place.
3. Apply caulk in remaining gaps and smooth with finger or putty knife. Use caulk or light-weight spackle to fill in holes left from finishing nails.
4. Touchup moulding as needed using high quality latex paint.

EXAMPLE DIAGRAM:

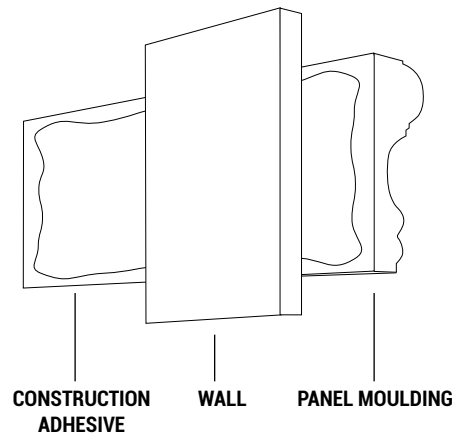

We Can Help. Call (866) 607-0453



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com