

COMPOSITE SHUTTERS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.
Wear safety goggles.
Follow fixture, power tools, and paint manufacturers' instructions and users manuals.
Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ electric drill
- ☐ ladder
- ☐ shutter hardware
- ☐ proper screws for installation surface
- ☐ screw driver
- ☐ level
- ☐ pencil, marker, or chalk

IMPORTANT INFO


- Tips for Painting Unfinished or Primed Shutters
- Avoid painting in direct sunlight or on a surface that is too warm.
 - Remove water and dirt on the shutter first.
 - Make sure they are completely dry before painting.
 - Do not use oil based paint. Use a premium 100% acrylic exterior latex paint.
- NOTE: Latex can take 2-4 days to dry. Avoid exposing shutters to moisture for a few days after you have painted the shutters.
- Avoid painting in damp or high humidity areas.
 - Let paint completely dry before installing the shutter to your home.

INSTALL INSTRUCTIONS:

Fixed Mount Hardware

1. Determine the position for the mounting brackets by matching up the top and bottom of the shutter with the window and mark its position.
2. Using a level set the bottom bracket in place and fasten using the correct screws for your installation surface. (Note: At this point it is recommended you place the shutter in place and double check your marking for the top bracket.)
3. Using a level set the top bracket in place and fasten using the correct screws for your installation surface.
4. If installing shutters larger than 55" fasten with center "L" brackets (A).
5. Set the shutter in place, mark the position of the holes on the shutter. Remove the shutter and drill pilot holes using a 1/8" bit.
6. Place the shutters back in place and fasten the shutter in place using screws being sure not to over-tighten the screws.

Clear Fixed Mount Shutter Bracket Kit

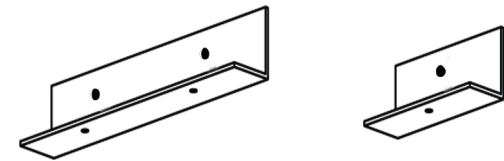

Ekena clear bracket kit gives the ability to install composite shutters directly to your house without the need to drill holes through the face of the shutter. Our shutter brackets attach to the top, bottom and sides of each shutter providing lasting support.

EXAMPLE DIAGRAM:

