

installation instructions:

ACRYLIC DECORATIVE SLAT WALL

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- Loctite power grab adhesive
- Fine sandpaper
- Chalk line & measuring tape
- Miter or Table Saw

IMPORTANT INFO

- Clean and prep the installation surface and each slat of any debris with a clean cloth.
- It is highly recommended that you paint or finish the panels before installation.
- Make sure the surface and the back of the panel are completely dry before installation.
- In most applications you will have to trim some slats. Cut them with a standard power tool, such as a table saw or miter saw. Sand cut edge ends and clean away any debris.
- We recommend using Loctite Power Grab adhesive

INSTALL INSTRUCTIONS:

1. Prep Slats before installing.
2. Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
3. We recommend laying out the desired layout before installation. Mark the installation points using a chalk line or straight edge and level.
A.) For single panels, start at either the top or bottom corner at the edge of the wall and work towards the opposite corner (Diagram A).
B.) For 2-piece panel sets start at the center and work out (Diagram B).
4. Apply a small amount of adhesive to the back of the panel. (Follow adhesive manufacturer's instructions for proper application.)
5. Once the first one is installed, repeat step 4 on the rest of the Slats

EXAMPLE DIAGRAM:

DIAGRAM A



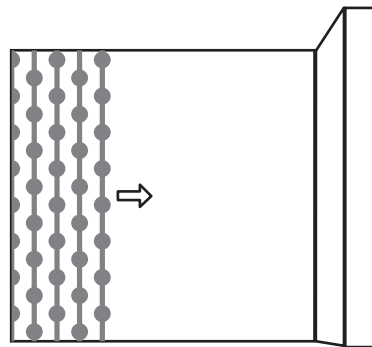


DIAGRAM B

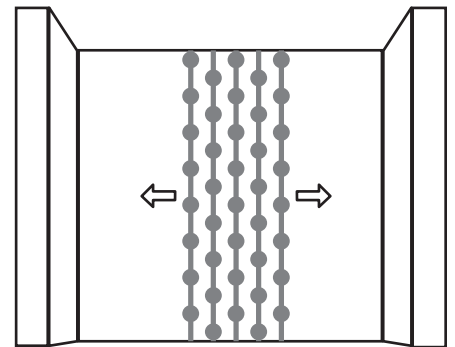

ADHESIVE

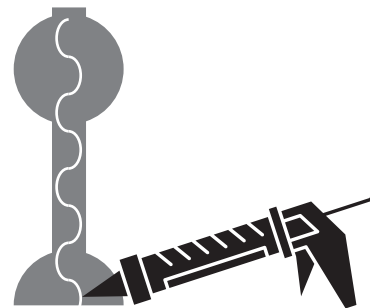

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

www.ekenamillwork.com