

DAKOTA

EST. 2012 **TIN** MADE IN USA

CORRUGATED WAINSCOT

INSTRUCTIONS

SAFETY EQUIPMENT:



TOOLS:



STORAGE:

Avoid moisture and direct sunlight.




HOW TO!
Scan to watch instructional video

Every project is different. Please use this instruction manual as a guide. Installation may vary and modifications may be required.


INSTALLATION INSTRUCTIONS

1. Remove any shipping wrapping.
2. Place screws (roofing screws recommended) every 12-16 inches.
3. Be sure to cover top edges with J-track or other border material to prevent injury.



IF CUTTING PANELS TO FIT

- Use tin snips or nibbler to cut small pieces. Use a circular saw with a ferrous metal blade for larger pieces.
- Remove any shavings from panel(s) to prevent damage to other areas. Be sure not to cut panels on top of existing panels.
- Wear cut resistant gloves, hearing and eye protection when using saws to cut metal. When using a circular saw, always cut from the back side panel to keep metal shavings from marring the finish.

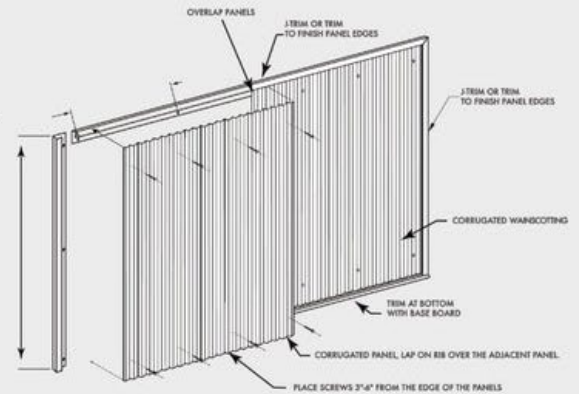

Questions? Visit us online at www.dakotatin.com or call 1-800-670-5798

/dakotatinceiling /dakotatin