


ASSEMBLY INSTRUCTIONS – ROOF MOUNT INSTALLATION COTTAGE SIZE WEATHERVANES

WEATHERVANE ASSEMBLY




1. Position brass ring over rod.




2. Slide large ball down rod to brass ring.

3. Interlock directionals... slide on rod.

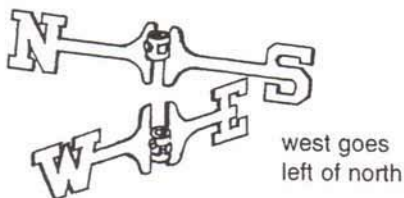

4. Slide small ball on rod...rest on directionals.

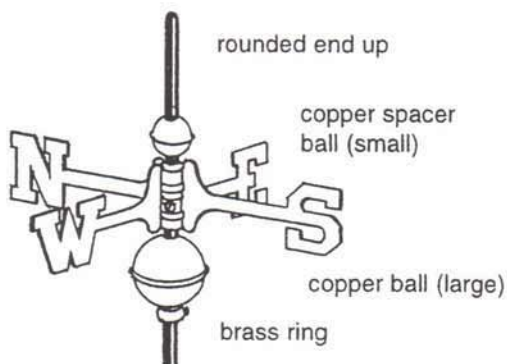

copper bottom of weathervane



5. Slide weathervane onto rod.

Slide weathervane and retaining hook* onto rod simultaneously.

Tighten set screw.

copper bottom of weathervane




retaining hook

*Retaining hook included with and required for 3-dimension

YOUR PACKAGE INCLUDES

- 1 Weathervane Figure
- 1 Set of Brass Directionals
- 1 Weathervane Rod
- 1 Set of Copper Balls (one large, one small)
- 1 Retaining Hook (if required)
- 1 Adjustable Roof Mount

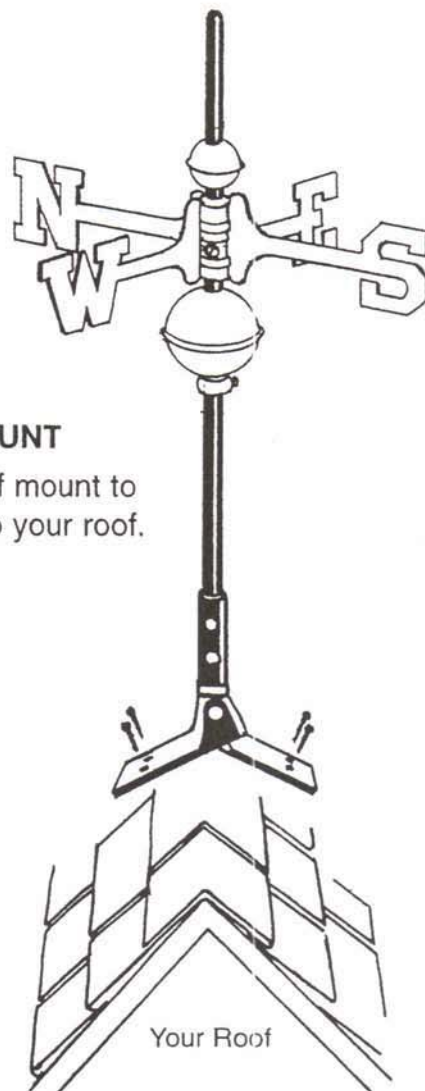


ROOFMOUNT

Adjust roof mount to conform to your roof.

Drill 3/32" holes using roofmount as a template. Fill holes with silicone caulk and drive in 1 1/4" screws provided. Check

WEATHERVANE ASSEMBLY




1. Position brass ring over rod.




2. Slide large ball down rod to brass ring.

3. Interlock directionals... slide on rod.

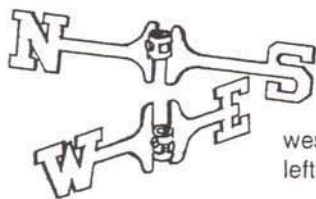

4. Slide small ball on rod...rest on directionals.

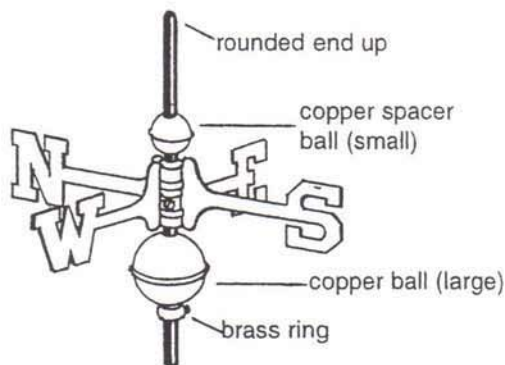

copper bottom of weathervane



5. Slide weathervane onto rod.


copper bottom of weathervane



Slide weathervane and retaining hook* onto rod simultaneously.

Tighten set screw.

*Retaining hook included with and required for 3-dimension figures only.

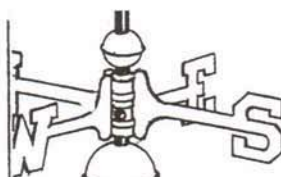

6. Slide weathervane rod into pole and lock using wing nut.

Section C

7. Thread section C into Section B. (See note →)

Section B

8. Thread* section B into section A for full 55' height. (See note →)


*Pliers may be required to tighten.

Section A

Press into ground for final installation.

YOUR PACKAGE INCLUDES

- 1 Weathervane Figure
- 1 Set of Brass Directionals
- 1 Weathervane Rod
- 1 Set of Copper Balls (one large, one small)
- 1 Retaining Hook (if required)
- 1 3-Piece Yard & Garden Pole

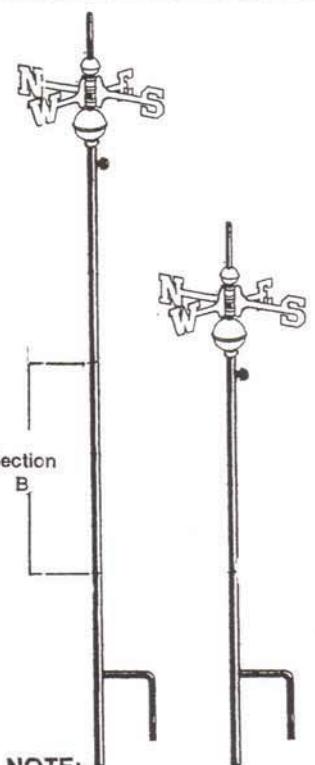

NOTE:
For less height (37" overall) Section B can be eliminated. A shorter pole may better suit your landscape.

1. ASSEMBLING TWO PART ROD



APPLY A LINE OF LOCTITE® (supplied) ACROSS THE THREADS. (This small amount is all that's needed)




THREAD SMALL ROD INTO LARGE ROD. POSITION WRENCHES ON FLAT SPOTS. TIGHTEN FIRMLY.

TIP: You may save the remaining LOCTITE® for other uses. Simply reverse the cap for storage

YOUR PACKAGE INCLUDES

- 1 Weathervane Figure
- 1 Set of Brass Directionals
- 1 Small Steel Rod
- 1 Large Steel Rod
- 1 Set of Copper Balls (one large, one small)
- 1 Tube of Loctite®
- 1 Retaining Hook (if required)

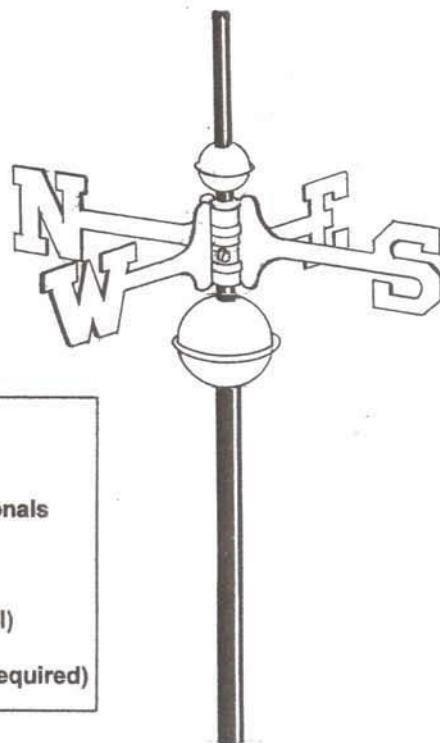


2.




SLIDE LARGE BALL DOWN TO JUNCTION OF THE LARGE AND SMALL ROD.

4. SLIDE SMALL BALL ON RODREST ON DIRECTIONALS

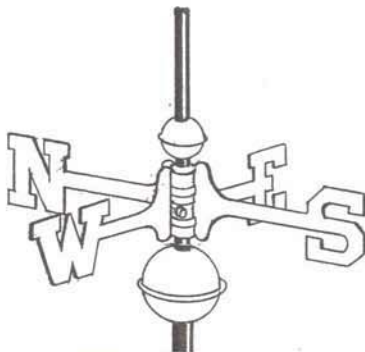

3. INTERLOCK DIRECTIONALS... SLIDE ON ROD

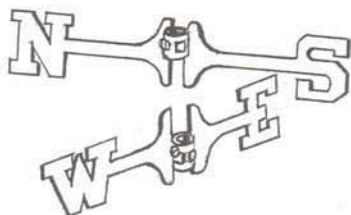

West goes left of North

5. Slide weathervane onto rod.




Slide weathervane and retaining hook* onto rod simultaneously.

Tighten set screw.

*Retaining hook included with and required for 3-dimension figures only.




CUPOLA ROOF

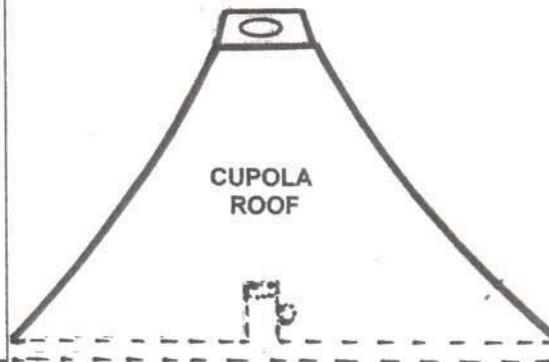

GOOD DIRECTIONS CUPOLAS ARE "WEATHERVANE READY" WITH INTERNAL MOUNTING BRACKET INSIDE ROOF.

THE WEATHERVANE ROD IS SECURED IN ROOF SECTION BEFORE THE FINAL ASSEMBLY OF CUPOLA.

COPPER SPACER BALL
(SMALL)

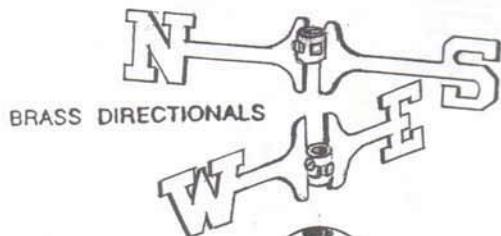


BRASS DIRECTIONALS

COPPER BALL (LARGE)



SMALL ROD

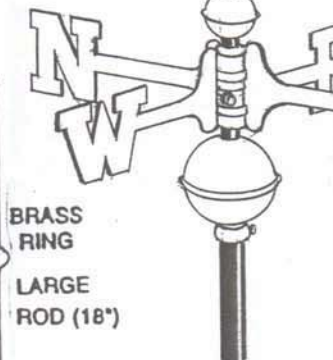

BRASS
RING


LARGE
ROD (18")

ASSEMBLED
VIEW

YOUR PACKAGE
INCLUDES THE
FOLLOWING PIECES:

- 1 FIGURE
- 1 Small Copper Ball
- 1 Large Copper Ball
- 1 Set of Brass Directionals
- 1 Brass Ring
- 1 Small Steel Threaded Rod
- 1 Large Steel Rod (18")
- 1 Tube of Loctite®

1




POSITION
BRASS RING
OVER LARGE
ROD. TIGHTEN
SET SCREW

2



APPLY A LINE
OF LOCTITE® (supplied)
ACROSS THE THREADS.
(This small amount is
all that's needed)


THREAD SMALL ROD
INTO LARGE ROD.
POSITION WRENCHES
ON FLAT SPOTS.
TIGHTEN FIRMLY.

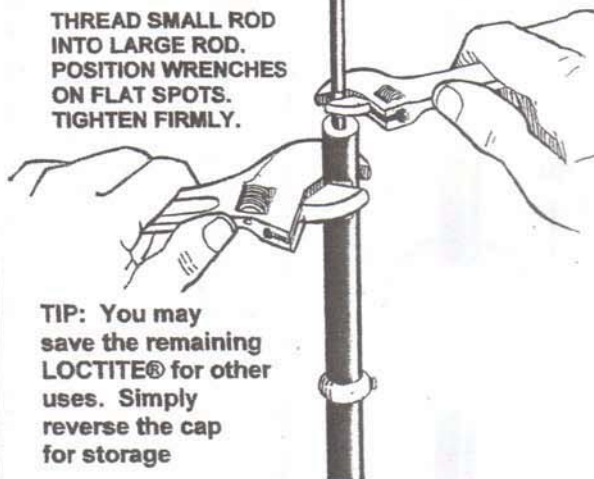

TIP: You may
save the remaining
LOCTITE® for other
uses. Simply
reverse the cap
for storage


3

SLIDE
LARGE
BALL
DOWN
ROD TO
BRASS
RING.

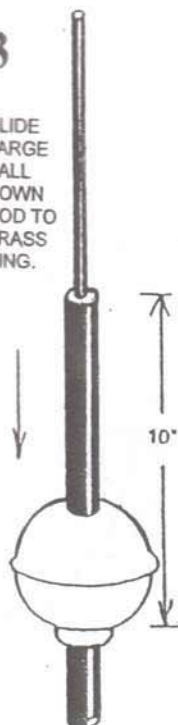

4


INTERLOCK
DIRECTIONALS.
SLIDE ONTO ROD.
TIGHTEN SET
SCREWS

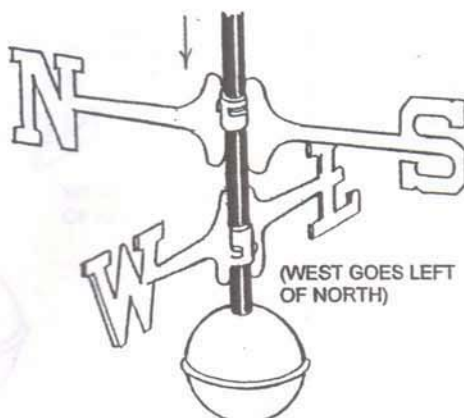

(WEST GOES LEFT
OF NORTH)

5

BRASS BOTTOM
OF WEATHERVANE
TUBE SLIDES
OVER SMALL
ROD.

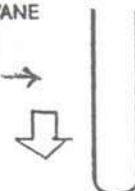


APPLY COMMON
GREASE TO ROD
SO VANE WILL
ROTATE FREELY.

FINAL STEP...
SLIDE WEATHERVANE
FIGURE ONTO
SMALL ROD...
ENJOY!



COPPER SPACER BALL
(SMALL)

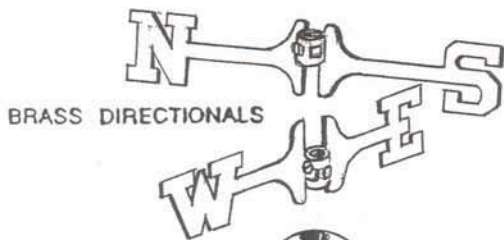

BRASS DIRECTIONALS


COPPER BALL (LARGE)



YOUR PACKAGE
INCLUDES THE
FOLLOWING PIECES:

- 1 Figure
- 1 Large Copper Ball
- 1 Set of Brass Directionals
- 1 Brass Ring
- 1 Small Steel Threaded Rod
- 1 Large Steel Rod (18")
- 1 Retaining Hook
- 1 Tube of Loctite®

SMALL ROD

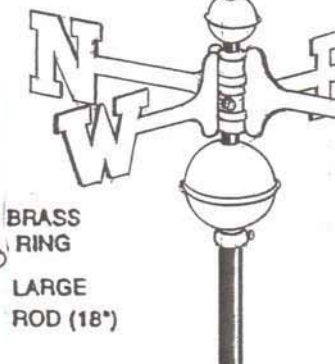


BRASS
RING

LARGE
ROD (18")

ASSEMBLED
VIEW

1



POSITION
BRASS RING
OVER LARGE
ROD. TIGHTEN
SET SCREW


2



APPLY A LINE
OF LOCTITE® (supplied)
ACROSS THE THREADS.
(This small amount is
all that's needed)


THREAD SMALL ROD
INTO LARGE ROD.
POSITION WRENCHES
ON FLAT SPOTS.
TIGHTEN FIRMLY.

TIP: You may
save the remaining
LOCTITE® for other
uses. Simply
reverse the cap
for storage

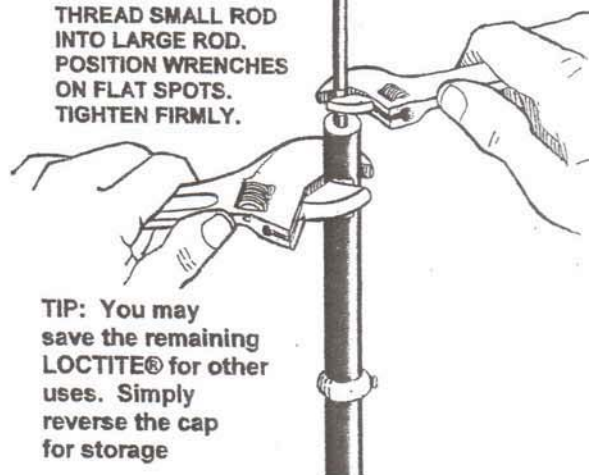


3

SLIDE
LARGE
BALL
DOWN
ROD TO
BRASS
RING.

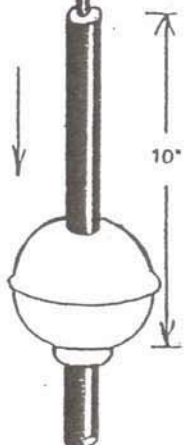

4

INTERLOCK
DIRECTIONALS.
SLIDE ONTO ROD.
TIGHTEN SET
SCREWS

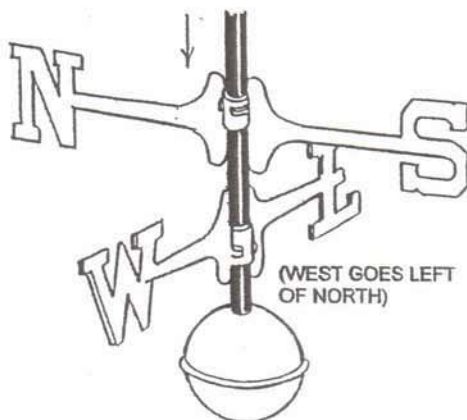

(WEST GOES LEFT
OF NORTH)


5


APPLY COMMON
GREASE TO ROD
SO VANE WILL
ROTATE FREELY.

SLIDE WEATHERVANE
AND RETAINING HOOK ONTO
SMALL ROD SIMULTANEOUSLY.
TIGHTEN SET SCREW.

Brass bottom
of weathervane

Retaining hook.

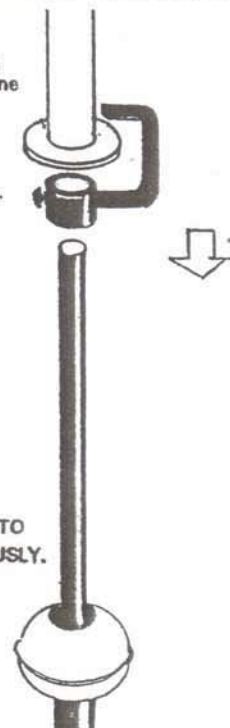

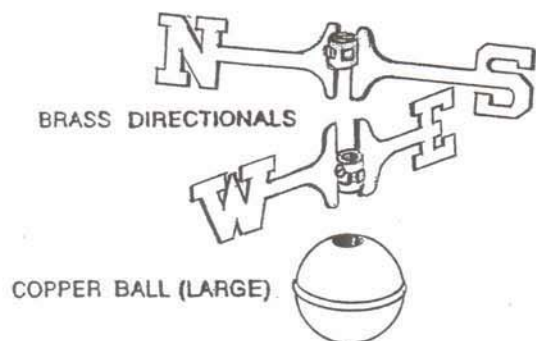

YOUR PACKAGE INCLUDES THE FOLLOWING PIECES:

- 1 Figure
- 1 Large Copper Ball
- 1 Set of Brass Directionals
- 1 Brass Ring
- 1 Small Steel Threaded Rod
- 1 Large Steel Rod (18")
- 1 Retaining Hook
- 1 Tube of Loctite®


SMALL ROD

BRASS RING

LARGE ROD (18")


ASSEMBLED VIEW

1




POSITION BRASS RING OVER LARGE ROD. TIGHTEN SET SCREW

2

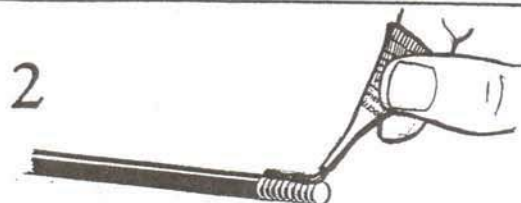

APPLY A LINE OF LOCTITE® (supplied) ACROSS THE THREADS. (This small amount is all that's needed)


THREAD SMALL ROD INTO LARGE ROD. POSITION WRENCHES ON FLAT SPOTS. TIGHTEN FIRMLY.

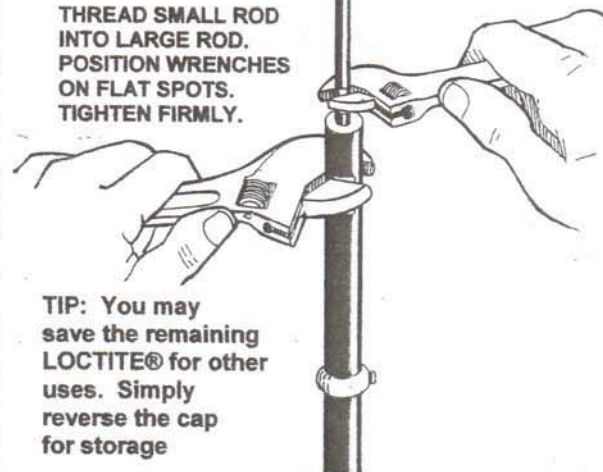

TIP: You may save the remaining LOCTITE® for other uses. Simply reverse the cap for storage


3

SLIDE LARGE BALL DOWN ROD TO BRASS RING.

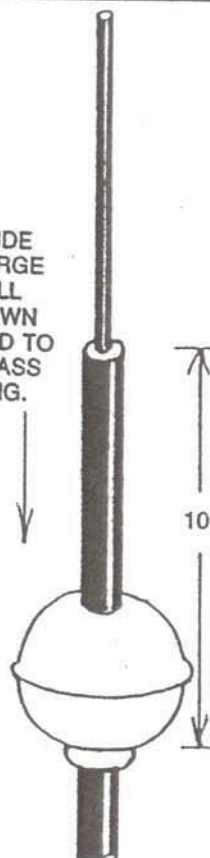


4

INTERLOCK DIRECTIONALS, SLIDE ONTO ROD. TIGHTEN SET SCREWS.

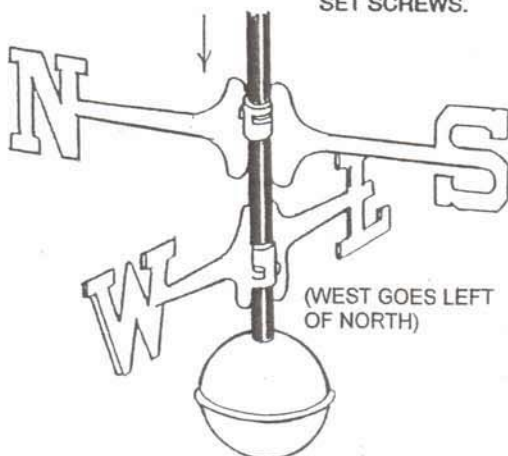

SLIDE WEATHERVANE AND RETAINING HOOK ONTO SMALL ROD SIMULTANEOUSLY. TIGHTEN SET SCREW.

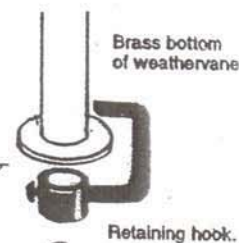

5

APPLY COMMON GREASE TO ROD SO VANE WILL ROTATE FREELY.

FINAL STEP... SLIDE WEATHERVANE FIGURE ONTO SMALL ROD... ENJOY!

