


# Assembly Instructions

## Standard Window Box

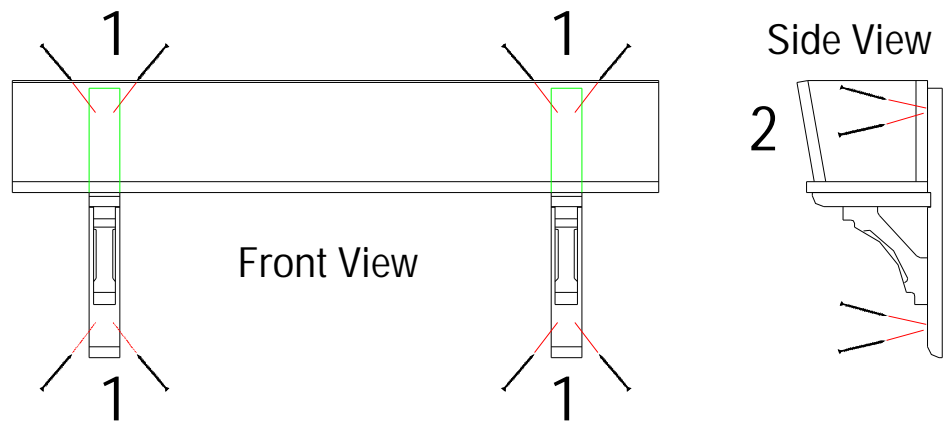

### **What you should receive:**

Box (1) Window box, Brackets,  
Hardware kit.

### **Tools you will need:**

Level, Drill, Phillips Head  
screwdriver, Safety Glasses, Foam  
brush or roller (for touch-up)

### **How to assemble and install:**

**1. Attach bracket to house.** Locate where window box brackets are going to be installed (make sure that they are level to one another and the house). Using the supplied drill bit, drill 4 pilot holes through each hole, in the brackets, into the side of the house. Fasten in place with the (8) 3" Stainless screws.

**2. Place window box on brackets.** Place window box centered on top of bracket arms pushed securely against the back of the bracket.

### **Your Hardware kit should include the following:**

- (1) 7/64"x3" Drill Bit
- (8) 3" Stainless Screws (#8)