Full Size Weathervane Assembly Instructions

GOOD DIRECTIONS

Watch our Assembly Video at www.gooddirections.com or scan

Your Package Contains the following:

One Weathervane Figure Plus...

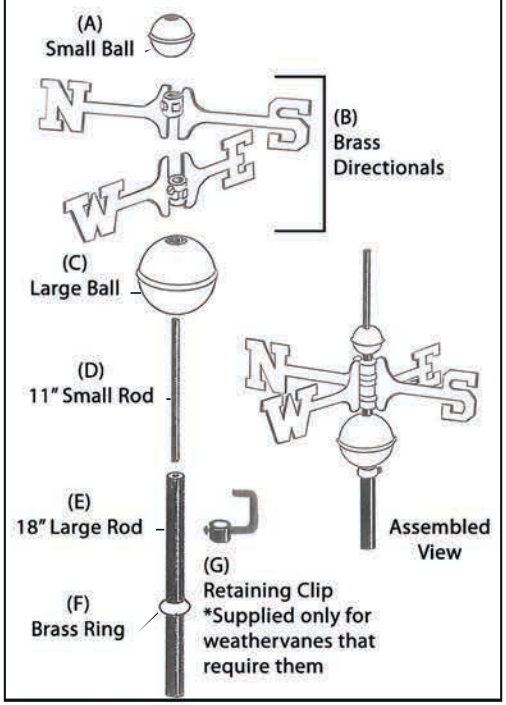

1

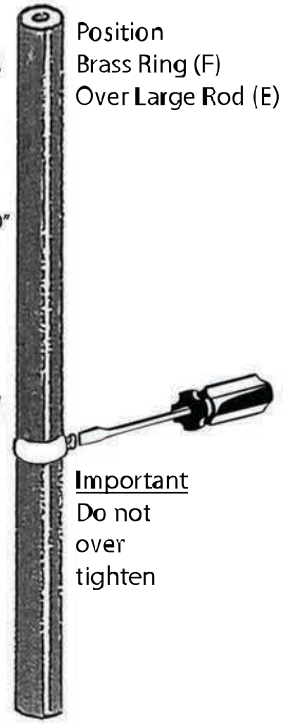

Position Brass Ring (F) Over Large Rod (E)

Important
Do not over tighten

2

Thread Small Rod (D) into Large Rod (E), Position wrenches on flat spots, Tighten Firmly.

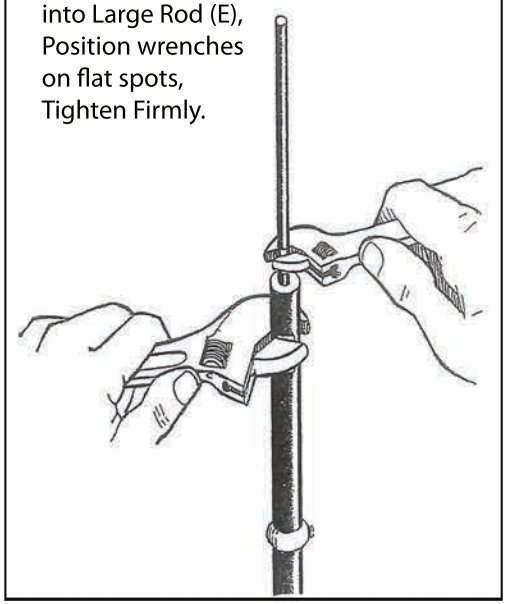

3

Slide Large Ball (C) down rod to Brass Ring (F).

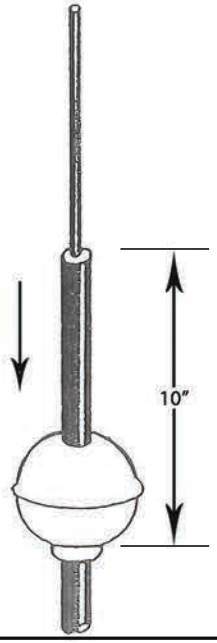

4

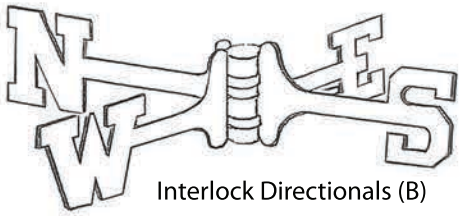

Interlock Directionals (B)

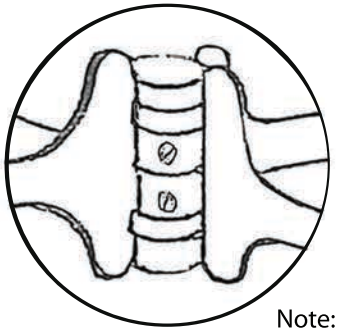

Note: NS+EW position is correct when both screws are aligned.

5

Slide Directionals (B) onto rod and tighten set screws.

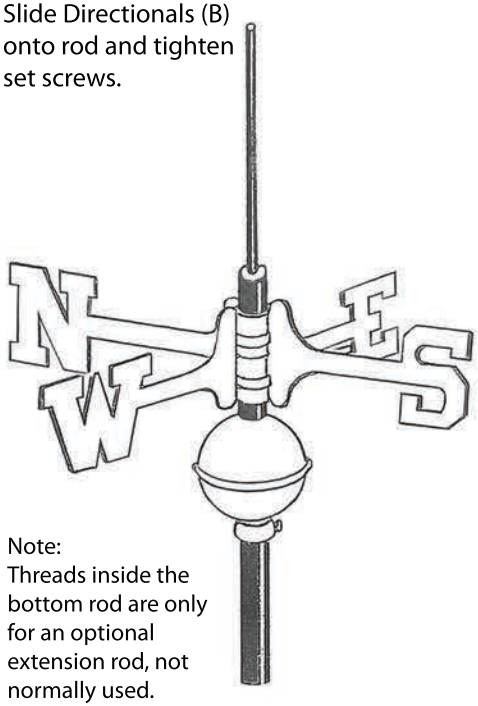

Note:
Threads inside the bottom rod are only for an optional extension rod, not normally used.

6

Adding a Retaining Clip

Supplied only for weathervanes that require them (to prevent windlift).

E.G. Eagle, heron, duck, or any weathervane with extended wings.

Bottom of Weathervane

When clip is in position, tighten set screw.

Add Small Ball (A) to Rod, Note: Smaller hole goes on top (ball fits loose)

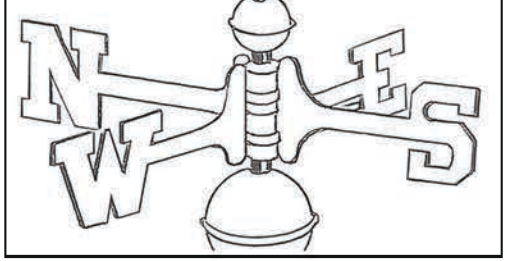

7

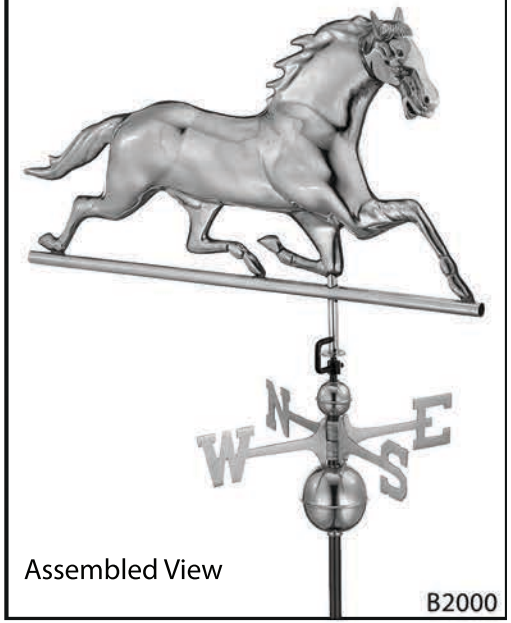

Assembled View

B2000